Bear Den Gazebo (Tall)

#492U - KM-BDG-GR

FIRE AND SAFETY PRECAUTIONS:

- Always ensure the gazebo is firmly secured to the ground before use.
- Always use external tie-downs and stakes to secure your gazebo.
- This gazebo is designed for temporary use only and not as a permanent structure.
- Never leave the gazebo unattended when raining or during windy conditions.
- Do not allow water to collect on the canopy roof, as this may cause the structure to callapse.

 
WARNING: THIS GAZEBO IS NOT FIREPROOF. KEEP AWAY FROM NAKED FLAMES AT ALL TIMES.

- Do not smoke in or near the gazebo.
- Do not place hot appliances in or around the gazebo.
- Do not use open flame heaters in your gazebo.
- Fabric will melt when contact is made with hot surfaces.



WARNING: Injury or death may result from fire if tent fabric is exposed to open flame. Tent fabric is not fireproof. Fabric will burn with extended exposure to open flame. Do not use open flame products inside tent.

WARNING: The UPF50+ rating is for the canopy material only. The amount of sun protection received will vary depending on the correct positioning of the gazebo. Please note the suggested positioning. Reflective rays can also cause sun burn. Sunscreen should be worn at all times.

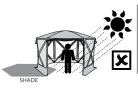





kumaoutdoorgear.com


CARE INSTRUCTIONS:

- FRAME: Wipe down with fresh water after use.
- CANOPY: Use a sponge with fresh water and mild detergent.
- Allow to dry thoroughly before storing. Do not store when wet.


ASSEMBLY INSTRUCTIONS





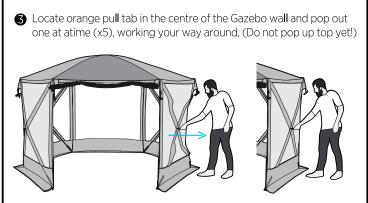



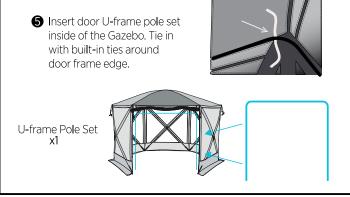

6 Peg down the Gazebo at the base of each corner. Use the guy ropes and pegs to secure firmly.



OR fill base flaps with rocks or sand to secure Gazebo.

HELPFUL TAKE-DOWN TIPS:

- Remove door frame pole set first 1.
- 2. Roll down and zip up the door panel
- 3. Pull down roof top (watch your head!)
- 4. Push in wall panels one at a time
- Store in carry bag